

Topcon Loadlog 300

Industrial Material Weighing



Load measurements for loaders
with single attachments

Learn more at topconpositioning.com


 **TOPCON**

Load weighing on the move

Specifically designed for loaders and forklifts, Loadlog 300 combines an integrated sensor measuring hydraulic pressure with an easy-to-use display to provide accurate, real-time load measurements.

- » Accurate, real-time load measurement (Tonnes, Kg, Lbs)
- » Rugged and reliable (IP67 rating)
- » Integrated alarm to notify capacity
- » Universal compatibility
- » Complementary enhancements (ICP 300 Printer & external audible alarm)

Schematic

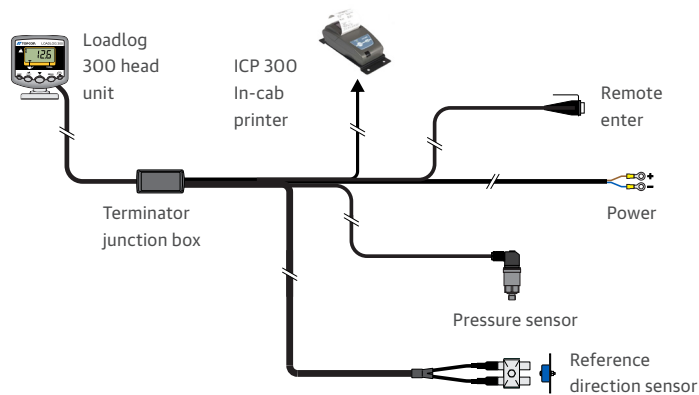

Specifications

Operating Voltage	11 - 28 VDC
Sensor Range	0 - 250 bar
Temperature Range	-5 to +120 °F operating
System Accuracy	+/- 2% (or better)
Environmental Protection	Instrument until IP67 and Full RFI/EMI protection 2014/30/EU, ISO 14982
Warranty	2 years

Specifications subject to change without notice.
© 2025 Topcon Corporation. All rights reserved. 7010-2337 B 02/25

Learn more at topconpositioning.com

