

Topcon Value Line Steering

Autosteering Solution



Automatic guidance technology
designed for all operations.

Learn more at topconpositioning.com

 **TOPCON**

Big Farm Technology. Small Budget Prices.

Elevate your farming efficiency with cutting-edge autosteering technology designed for farms and budgets of all sizes. With Value Line Steering, experience proven precision and ease of automatic steering for your front wheel assist and front wheel steer tractors.

Value Line works with nearly every brand machine, making it the perfect fit for your farming needs. Designed for reliability, it's affordable, user-friendly, and backed by expert support. Enhance crop yields, accuracy, and efficiency while reducing operator fatigue.

- » Position-based (GNSS) automatic steering for many agricultural machines
- » Reliable hardware - receivers, controllers, and displays
- » Range of accuracy options upon operational needs
- » High quality at an accessible price for every operation



Reduce Key Inputs



Empower Labor



Improve Fertility and Yield



Correction Services

Options for every scenario



GNSS Receiver

Reliable positioning



Electric Steering Wheel

Powerful hands-free control



Display

Smart touchscreen consoles



Powerful steering in a straightforward package

Topcon offers flexibility. Whether it's simply steering or control of other key precision agriculture solutions, we have a clear path to guide you there. Through Value Line Steering, you get access to any steering pattern you

need, plus more advanced features including Steer to Boundary, Guidelock and Headland Turns. Even control ISOBUS implements through ISOBUS-UT and TC functionality.

Modern Touchscreen Consoles Options



XC1 plus (10" display) / XC1 (7" display)

Reliable GNSS Receiver




XR-1

Powerful Electric Steering Wheel




XW-1

How precise do you need to be?

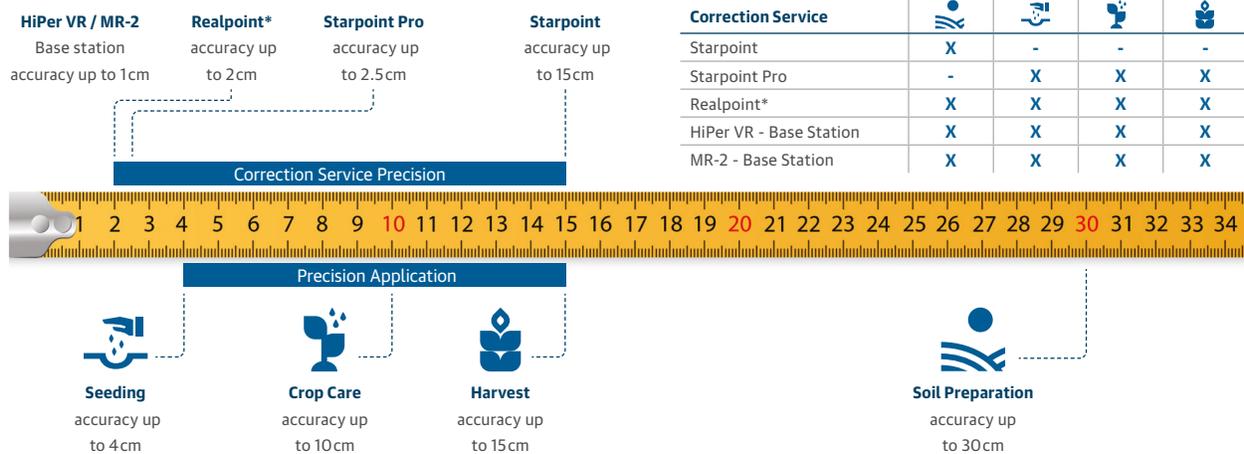


*Local coverage varies, confirm availability with local dealer (Preferred cellular source as Cloudlynk device (CL-20 and CL-55) and TAP NTRIP)

We offer guidance patterns for every application

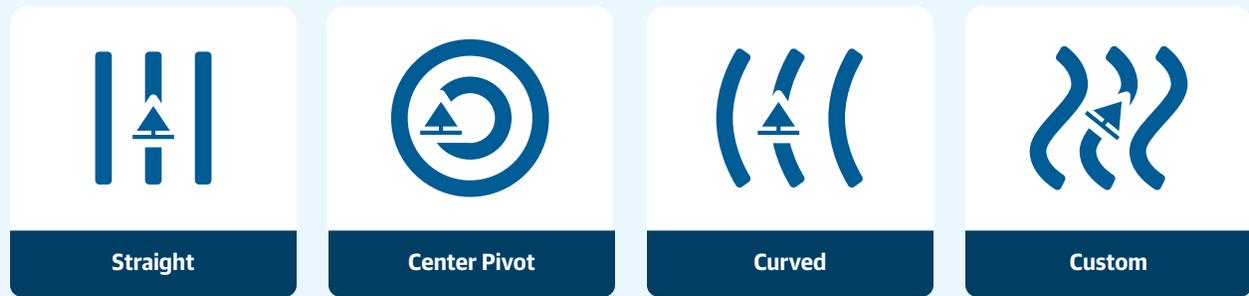

Steer smart with relevant features

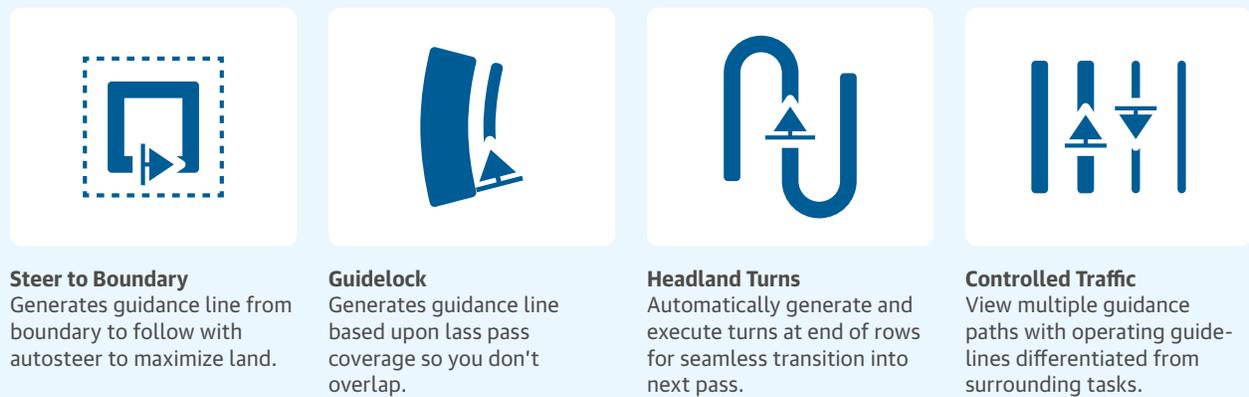

Virtual Wheel Angle Sensor

To reduce system costs and simplify setup, we've developed a new digital approach to enhance autosteering performance. Previously requiring a mechanical wheel angle sensor, Value Line Steering introduces integrated software that matches the benefits in most conditions without the need for an additional hardware installation.





Easy-to-use in-cab operating software

The Topcon in-cab operating software, Horizon Lite OS, is all about efficiency and connectivity. It runs on responsive, smart touchscreen consoles (available as the 7-inch XC1 or 10-inch XC1 plus). The software's easy usability is designed to make setup efficient and help operators feel confident.

ISOBUS Implement Control

Automate key applications with complementary ISOBUS solutions. This optional unlock provides ISOBUS-UT and TC functionality, offering display compatibility for ISOBUS protocol solutions. It allows you to integrate with ISO ECUs for automatic control and mapping. The solution provides basic control for an implement with a single boom or single tank and supports up to 32 sections.



Variable Rate Control (VRC)

Enable precision application and help reduce key inputs with the optional Variable Rate Control (VRC) unlock. This feature enables variable rate application by referencing imported prescription maps. Note: This VRC unlock requires the ISOBUS Implement Control unlock to be active.

Collect data and make better decisions with our cloud software, the Topcon Agriculture Platform (TAP)

Designed for farmers, dealers, agronomists, and input suppliers who need to gather and consolidate key operational information, the Topcon Agriculture Platform (TAP) brings connectivity to every phase of the farming cycle. TAP is a simple tool to organize, visualize, and automate information, helping farmers make better decisions based on data from across the entire operation. With TAP, we now offer a comprehensive and clear path into digital farm management.



Easily connect consoles to our cloud software



1 Console
Easily connect your XC1 or XC1 plus consoles to the Topcon Agriculture Platform.



2 Data Transfer
Plug-in a CL-20 Cloudlynk data transfer device to seamlessly transfer data to TAP via cellular networks. Alternatively, use our Wi-Fi dongle or even a classic USB to manually transfer data.




3 Topcon Agriculture Platform (TAP)
Automatically ingests data through the CL-20 or manually via Wi-Fi or USB, helping you organize, visualize and make better decisions.

Flexible subscriptions and powerful addons



TAP Fields
Easily organize, visualize, and decide.

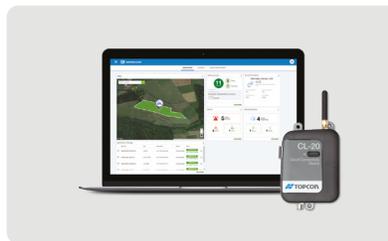

TAP Pro
Streamline transfer and track the fleet.



Satellite imagery
Measure crop and field health for insights that lower risk.

Automate key applications through complementary Topcon ISOBUS solutions



Tillage Depth Control

Maintain a pre-set depth for consistent and repeatable tillage.



Boom Height Control

Maintain a pre-set height to optimize applications and reduce drift.

Designed with Quality in Mind

With over 20 years in steering solutions, you can expect easy-to-use technology, smart features, reliable global support, and a path to guide you to the next level on your precision agriculture journey.

Engineered for excellence, we leverage facilities across the globe to develop high quality solutions.





Compatible with most tractors

Value Line Steering is compatible with most front wheel assist, front wheel steer, and rear wheel steer tractors. Our solution is capable in even the most challenging conditions, equipped with advanced terrain compensation technology.

Do you need more than steering and ISOBUS control?

Beyond Value Line Steering, we offer more advanced steering solutions tied to automating many key activities throughout the crop cycle. Checkout Premium Line Steering for full access to our complementary crop production solutions to make your operation even more efficient.



Lean on reliable dealer networks including remote support

Our trained dealers and extensive support network is here to help. Our remote support capability, allowing

3rd parties to connect to your display make it even more efficient.



Remote Support



Specifications subject to change without notice.
© 2025 Topcon Corporation. All rights reserved. 7010-2418 C 11/25

Learn more at topconpositioning.com

