

## Global GNSS Correction Service

Topnet Live




WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?

## Table of Contents


Navigate sections by clicking the buttons below.

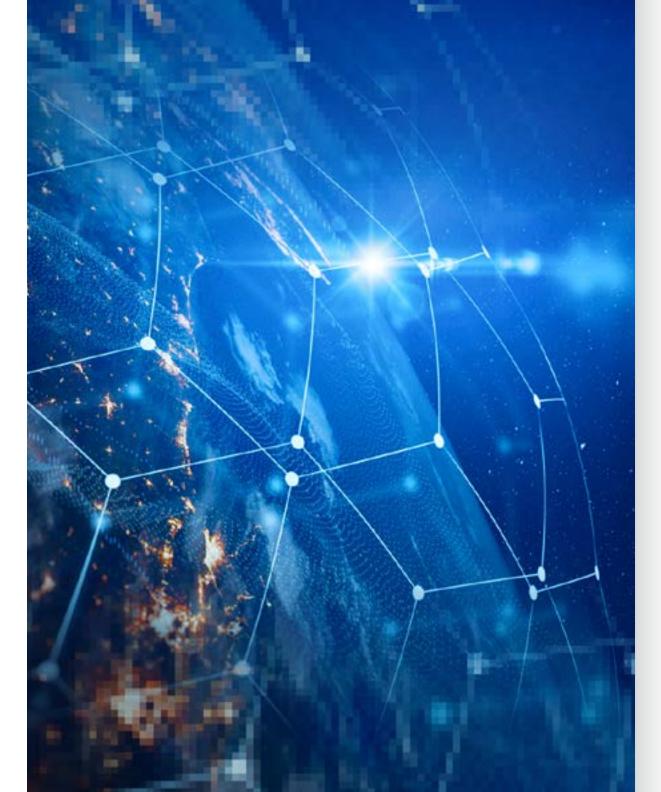

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?

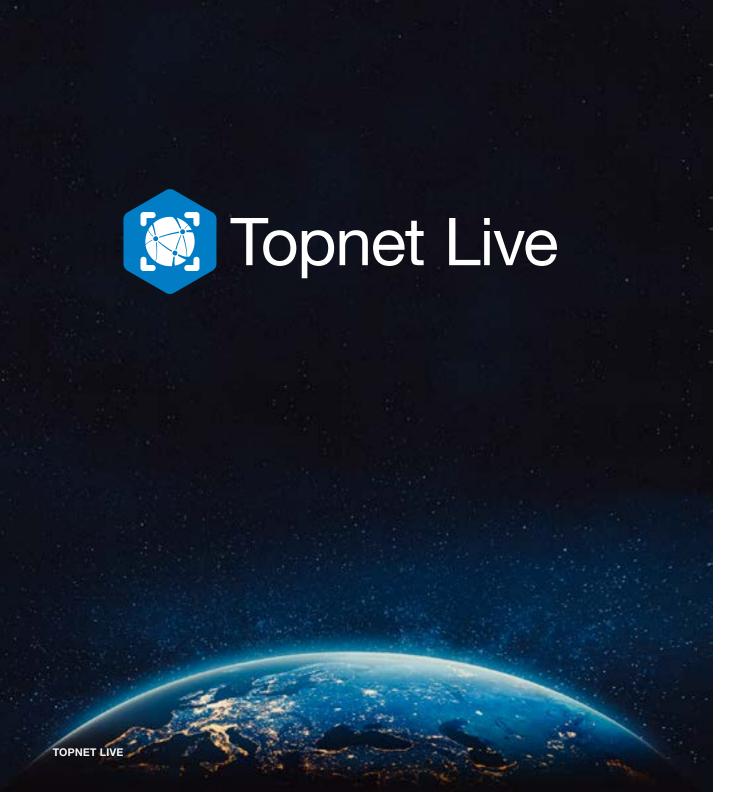

## What is Topnet Live?

Topnet Live supplies a wide range of global GNSS correction services, with a variety of subscription packages, designed to meet the unique needs of our customers by providing accurate and reliable positioning information.

Topnet Live is a real-time GNSS correction service delivering high quality data to GNSS receivers used for surveying, construction, GIS, mapping, OEM, system integrators and agricultural applications worldwide. Fully interoperable with all makes of network capable rovers, subscriptions are made easily available through the Topnet Live website.


Topcon Positioning Group operates and monitors all Topnet Live networks. Our geodetic specialists and professional standards ensure high quality correction data is delivered globally to each GNSS receiver.

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY
TOPNET LIVE?

## Topnet Live Solutions

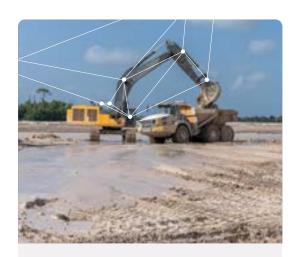

#### Construction

Eliminating on-site base stations,
Topnet Live is increasingly being used in high-profile construction projects.
Large highway construction projects, airport runways and machine control operations all benefit from the reliable accuracy and performance of Topnet Live GNSS reference networks.



### **Agriculture**

Topnet Live networks deliver consistent, high-precision positions to precision agriculture machines used in applications across the crop cycle such as soil preparation, seeding and crop care. Equipped tractors, sprayers, spreaders and harvesters benefit from fast initializations and reliable positioning, any time of the day or night.



## Survey

Topnet Live delivers high-accuracy positioning to professional surveying and engineering applications such as land surveys, engineering surveys, GIS and mapping. Topnet Live removes the need for individual base stations, dramatically increasing production and safety.




# **OEM:** System Integrators

Topnet Live is a global positioning correction service for system integrators, product designers and OEMs. It is ideal for scalable, precision GNSS positioning needs for applications such as automotive, Industrial IoT and autonomous robotics.

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY
TOPNET LIVE?

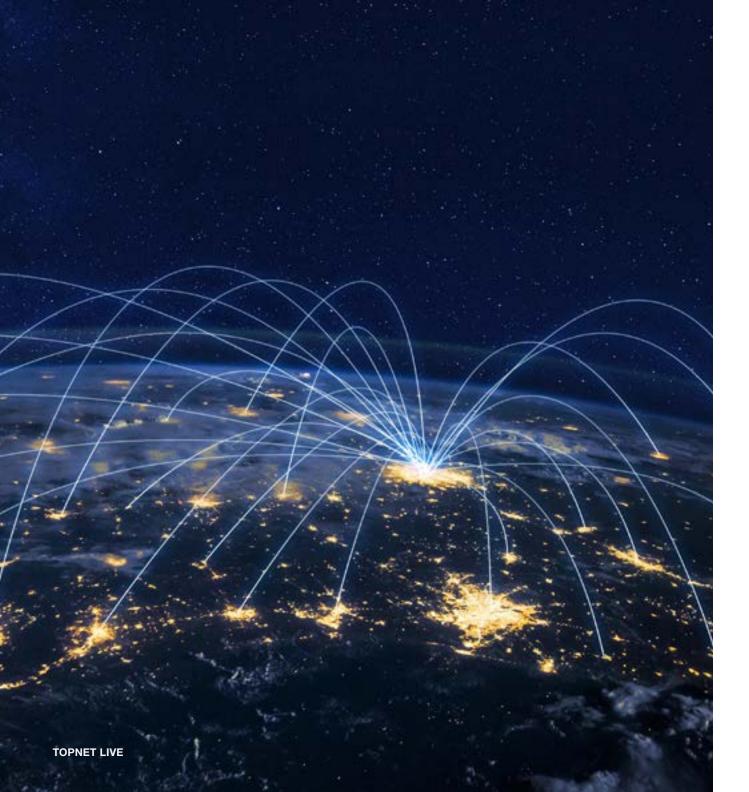

## **Technology Overview**

To provide precise positioning accuracy, a GNSS receiver needs to compensate for inaccuracies caused by satellite constellations, receiver hardware and atmospheric conditions. These inaccuracies can be calculated by a network of fixed reference stations that constantly receive GNSS data.

This correction information is then broadcast to GNSS receivers as a correction service. Topnet Live is Topcon's GNSS correction service and consists of the reference station network, the correction calculation software and the correction broadcast service.

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?

## Positioning methods


Topcon manages, operates and monitors all Topnet Live reference networks.

### **Real-time Kinematic (RTK)**

RTK is a positioning method to enhance the precision of position data derived from satellite-based positioning systems. RTK works through a network of stations covering local regions. Single Base RTK provides fast and accurate correction from one specific or nearest reference station. Network RTK delivers the correction from a number of stations in a local network of reference stations.

### **Precise Point Positioning (PPP)**

PPP is a positioning method to calculate precise positioning down to a few centimeters of accuracy using a single receiver in a global reference framework. PPP provides a service anywhere on the planet, independent of local networks. It delivers accuracy suitable for mapping and guidance applications and has a short start-up time.

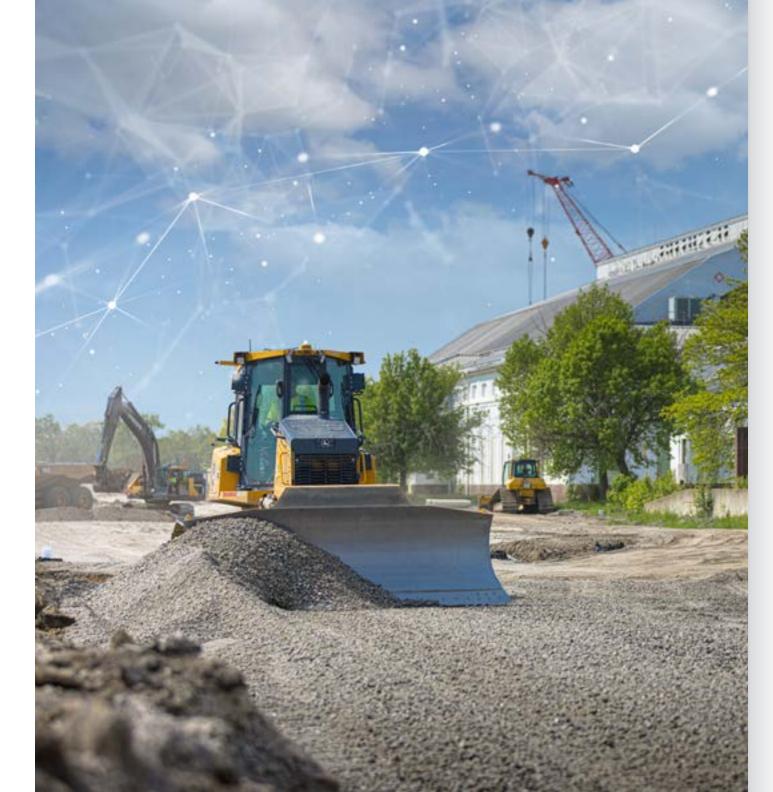

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY
TOPNET LIVE?


### **Constant Coverage**

Both types of networks offer advantages and disadvantages. That is why we designed and developed a service to provide our customers access to both systems simultaneously, even switching automatically between them as reception changes. This means the customer always has the best of both systems and a truly global service.

### **Full-Constellation Service**

Our reference station network uses four GNSS satellite systems: GPS, GLONASS, Galileo and BeiDou. This ensures the best accuracy and reliability, often referred to as a full-constellation service.

	NETWORK RTK	PPP
+	<ul><li>Provides survey-grade accuracy</li><li>Quick start-up</li></ul>	<ul> <li>Global coverage</li> <li>Seamless coverage – just one subscription required</li> </ul>
-	<ul> <li>Requires dense local network</li> <li>Requires individual subscriptions to each network</li> </ul>	<ul><li>Less accurate than RTK</li><li>Slower start-up than RTK</li></ul>

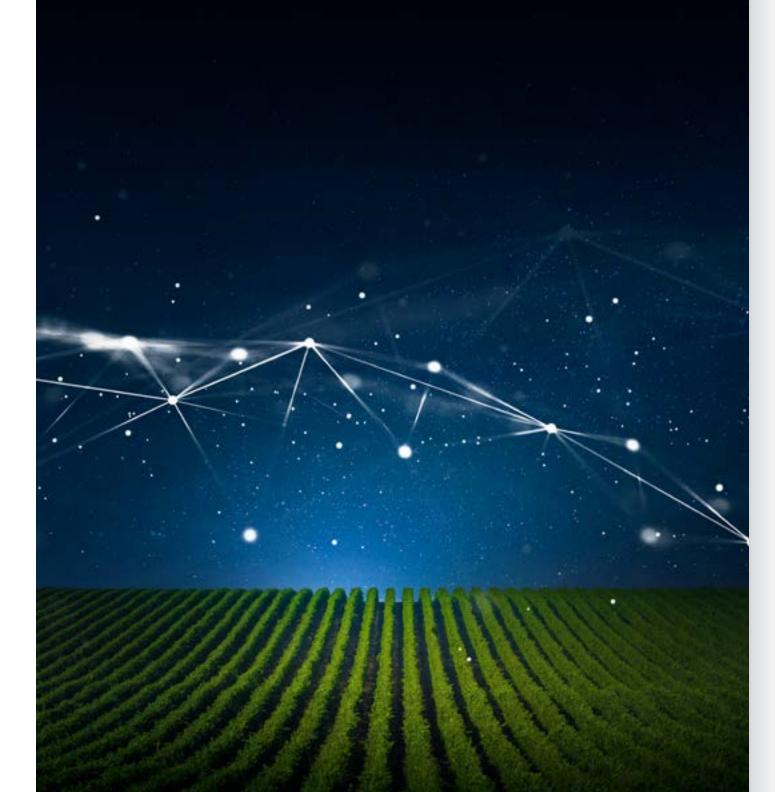

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?

### **Broadcasting**


The Topnet Live correction service is broadcast to customer receivers in two ways:

- NTRIP Over the Internet, typically accessed using a mobile phone SIM card data link.
- L-Band Direct broadcasting from a satellite.

Customers have both options and can use whichever is most convenient.

### **Data Services**

As an additional service, the raw data (RINEX) from the networks are available to download. There is also an online correction processing service for specialist applications.

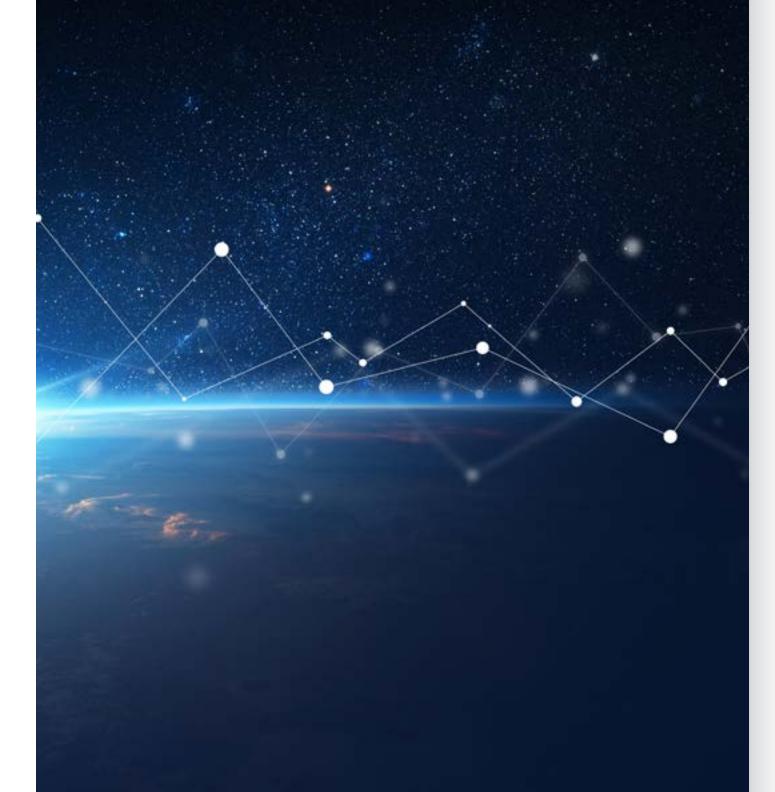

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?

WHY TOPCON?

**TOPNET LIVE** 



## Why Topnet Live?



#### **Truly global solution**

Topnet Live is a truly global solution, providing correction service anywhere with the combination of global PPP and regional GNSS reference networks.



#### Reliable service

Topnet Live is managed by Topcon's own network and geodesy experts, ensuring a precise and reliable alwayson service.



#### **Operated by Topcon**

Regional GNSS reference networks are operated by Topcon and our partners to provide coverage in all major regions of the world.



#### Flexible and tailored

Our OEM GNSS boards can be preconfigured for immediate use by system integrators' customers, with flexible subscription and licensing options to suit the exact need.



#### **Seamless subscriptions**

Customers can have a single subscription that provides borderless service which automatically switches between regional GNSS reference networks.



#### Fully scalable

The entire solution is scalable, so system integrators do not need to limit locations or numbers of customers.

WHAT IS **TOPNET LIVE?** 

**TECHNOLOGY OVERVIEW** 

WHY **TOPNET LIVE?** 







Provides network RTK accuracy and quick start-up time.

The graphics are intended as a representation of countries that have coverage available. However, coverage may not be fully available within the countries indicated.



Starpoint

Provides the PPP service anywhere on the planet, independent of local networks.



Skybridge

Skybridge allows RTK subscribers to combine RTK with PPP correction services. RTK is supported by PPP during lack of coverage or service outages.

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?

## The Best of RTK and PPP

	REALPOINT	STARPOINT PRO	SKYBRIDGE	
Correction Type / Delivery	RTK via NTRIP	PPP via L-Band	Correction via satellite	
Coverage	Regional	Global	Regional or Local	
Horizontal Accuracy*			Infill for DTV	
Vertical Accuracy*	_	5 cm	Infill for RTK	
Initialization or Convergence Time**	Seconds	< 5 mins	Seamless Activate automatically	
Industries	Surveying, Construction, Machine Control, Agriculture, OEM, Industrial IoT and Autonomous Robotics	Agriculture, OEM, Surveying in Remote Areas, Automotive, Industrial IoT and Autonomous Robotics	Surveying, Construction, and Agriculture	

<sup>\*</sup>The specifications are based upon field and laboratory testing. Accuracy and convergence time may be affected by user hardware type (antenna/receiver), available GNSS constellation (PDOP), and site conditions.

WHAT IS TOPNET LIVE?

<sup>\*\*</sup>Performance may be degraded in conditions with high lonospheric activity, extreme multipath, or under dense foliage. For maximum system accuracy, always follow best practices for GNSS data collections.



## Trust Topcon

We are the ideal partner for developing advanced solutions for your positioning and machine control challenges. Our experience, technical expertise and overall company strength make us uniquely qualified to provide enhanced automation technology and ultimately drive your customers' productivity to higher levels—along with your market share.

We can provide customized or off the shelf products, including GNSS hardware or correction services. Our global technical centers ensure personalized support can be available no matter where your manufacturing operations exist.

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?

WHY TOPCON?

SPEED TO MARKET | GLOBAL NETWORK | EXPERIENCED OEM TEAM

## A History of Topcon Corporation



WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY
TOPNET LIVE?


Trust Topcon to get you there faster with high-quality positioning and automation solutions tailored to your product strategy.

### **Independent Solutions**

In an industry with many contractual alliances, we remain independent. We have the freedom to develop technologies that best fit your unique product goals. Our custom OEM solutions are all clean-sheet designs, providing more opportunities to differentiate your product from the competition.

### **Speed To Market**

Product development carries an inherent pressure to do everything faster and better than before, particularly since technology is only viewed as innovative if it arrives before the competition. Our experience helps simplify and shorten the design process, allowing you to go to market with your product faster – and with the utmost confidence.

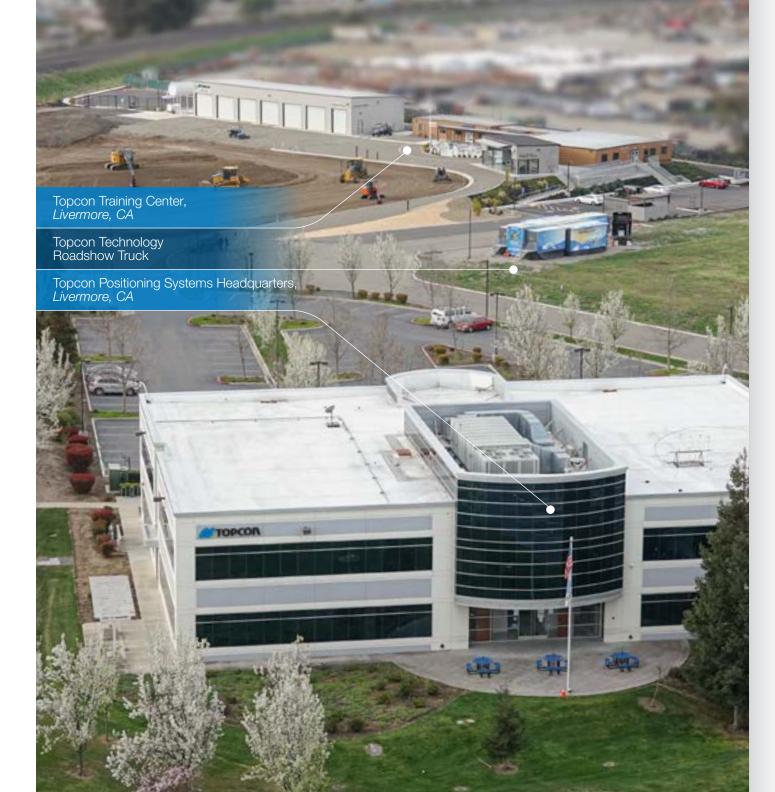

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY
TOPNET LIVE?



TOPNET LIVE





#### 4900+ Employees | 2100+ Patents



### **Global Network**

With an extensive worldwide network of corporate offices, R&D centers and technical groups, we have an unmatched capability to assist any manufacturer, no matter where they are located, with fully integrated machine automation solutions. This also positions us to create programs to assist and support your dealer networks, directly or through extensive training programs.

## **Experienced OEM Team**

Our experienced OEM team knows what questions need to be answered first and the potential pitfalls to be avoided along the way. Their first objective is to make sure our technology is the right fit for your application, and then be your partner every step of the way.

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?



#### topconpositioning.com/topnetlive

Specifications subject to change without notice.
© 2024. Topcon Corporation. All rights reserved. Rev E 10/24

WHAT IS TOPNET LIVE?

TECHNOLOGY OVERVIEW

WHY TOPNET LIVE?